



Level Electrode

NRG 16-50S

EN
English

Installation Instructions
819013-02

Contents

Page

Usage for the intended purpose	4
---	----------

Function	4
----------------	---

Important Notes

Safety note	5
-------------------	---

Scope of supply	5
-----------------------	---

Example name plate / marking.....	6
--	----------

Technical data

Dimensions NRG 16-50 S	7
------------------------------	---

NRG 16-50 S	8
-------------------	---

Installation

NRG 16-50 S	9
-------------------	---

Key	9
-----------	---

NRG 16-50 S, step 1	10
---------------------------	----

NRG 16-50 S, step 2	10
---------------------------	----

Tools	10
-------------	----

Examples of installation for NRG 16-50 S	11
--	----

Key	12
-----------	----

Electrical Connection

NRG 16-50 S with four-pole connector	13
--	----

Key	13
-----------	----

Connection of level electrode	14
-------------------------------------	----

NRG 16-50 S with four-pole connector	14
--	----

Tools	14
-------------	----

Wiring diagram	15
----------------------	----

Key	16
-----------	----

Contents

Page

Commissioning, fault indication and remedy.....16

Removing and disposing of electrode

Removing and disposing of electrode16

Declaration of Conformity; Directives and Standards17

Usage for the intended purpose

The level electrode NRG 16-50 S is used in conjunction with level switch NRS 1-50 (de-energizing delay: 15 seconds) as water-level limiter for steam boilers and (pressurized) hot-water installations on board of seagoing vessels, mobile offshore platforms or river boats.

Water level limiters switch off the heating when the water level falls below the set minimum level (low water).

Function

When the water level falls below the low level, the level electrode is exposed and a low level alarm is triggered in the level switch NRS 1-50. This switchpoint "Low water level (LW)" is determined by the length of the electrode tip.

After the de-energizing delay has elapsed, the two output contacts of the level switch NRS 1-50 will open the safety circuit for the heating. The equipment has a factory set default de-energizing delay of 15 seconds to compensate for the the movements of the ship.

The self-monitoring function ensures that an alarm will also be triggered if the electrode insulation is contaminated or has developed a leak or if there is a malfunction in the electrical connection.

The level electrode is installed inside steam boilers, vessels or inlet lines of hot-water systems. The protective tube mounted on site (see section **Examples of Installation** (pages 10, 11)) ensures correct functioning.

If the level electrode is installed in an isolatable level pot outside the boiler, make sure that the connecting lines are rinsed regularly. In addition, the logic unit SRL 6-50 is required to monitor the purging times and the purging sequence.

If the connecting lines for steam ≥ 40 mm and water ≥ 100 mm, the installation is considered to be internal. In this case the rinsing processes do not have to be monitored.

Important Notes

Safety note

Water level limiters are safety devices and must only be installed, wired and commissioned by qualified and competent staff.

Retrofitting and maintenance work must only be performed by qualified staff who – through adequate training – have achieved a recognised level of competence.



Danger

When loosening the level electrode steam or hot water might escape!

This presents the risk of severe scalding all over the body!

It is therefore essential not to dismantle the level electrode unless the boiler pressure is verified to be 0 bar.

The level electrode becomes hot during operation.

Risk of severe burns to hands and arms.

Before carrying out installation and maintenance work make sure that the equipment is cold.



Attention

The name plate specifies the technical features of the equipment. Do not commission or operate any item of equipment that does not bear its specific name plate.

Scope of supply

NRG 16-50 S

1 Level electrode NRG 16-50 S, PN 40, DN 50

1 Installation manual

Example name plate / marking

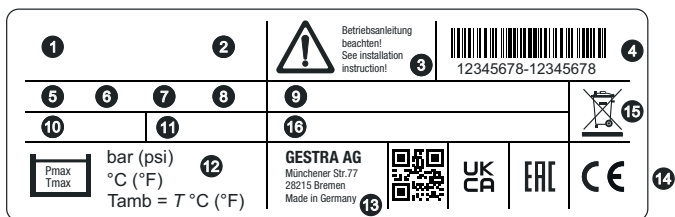


Fig. 1

- ❶ Equipment designation
- ❷ Function
- ❸ Safety note
- ❹ Material number, serial number
- ❺ Nominal pressure rating
- ❻ Connecting thread
- ❼ Material of thread
- ❽ Protection
- ❾ Type approval
- ❿ Size of connecting flange
- ⓫ Length of electrode
- ⓬ Operating data (max. pressure and temperature)
- ⓭ Manufacturer
- ⓮ Conformity mark
- ⓯ Disposal note

Optional data

- Ⓟ Gasket / cell constant / additional data

Technical data

Dimensions NRG 16-50 S

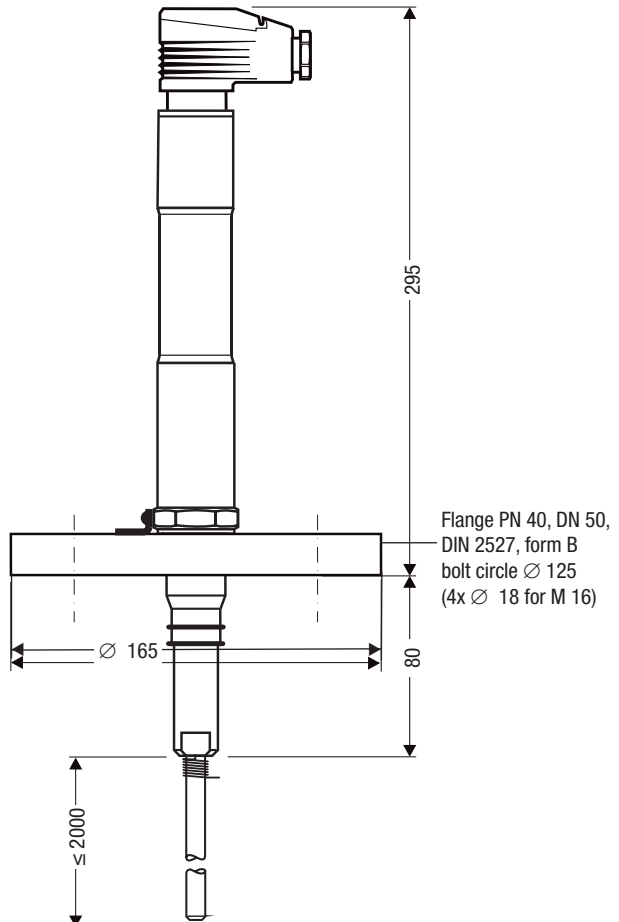


Fig. 2

NRG 16-50 S for
marine applications

Technical data

NRG 16-50 S

Service pressure

PN 40, 32 bar at 238 °C

Mechanical connection

Flange PN 40, DN 50, DIN 2527, form B

Materials

Sheath 1.4301, X5 CrNi18-10

Flange 1.0460 / A 105

Screw-in body 1.4571, X6CrNiMoTi17-12-2

Measuring electrode 1.4571, X6CrNiMoTi17-12-2

Electrode tip 1.4401, X5CrNiMo17-12-2

Electrode insulation Gylon®

Four-pole connector Polyamid (PA)

Lengths available

500 mm, 1000 mm, 1500 mm, 2000 mm

Electrical connection

Four-pole connector, cable gland M 16

Protection

IP 65 to EN 60529

Max. admissible ambient temperature

70°C

Weight

Approx. 4.5 kg (without electrode tip)

Installation

NRG 16-50 S

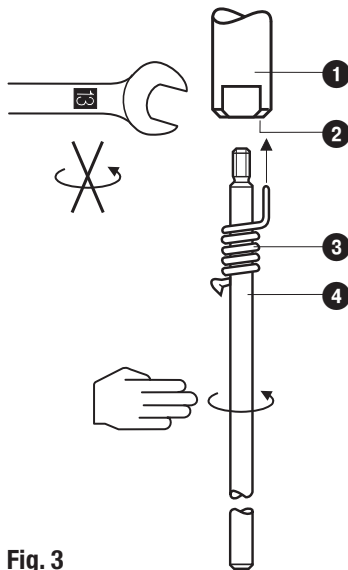


Fig. 3

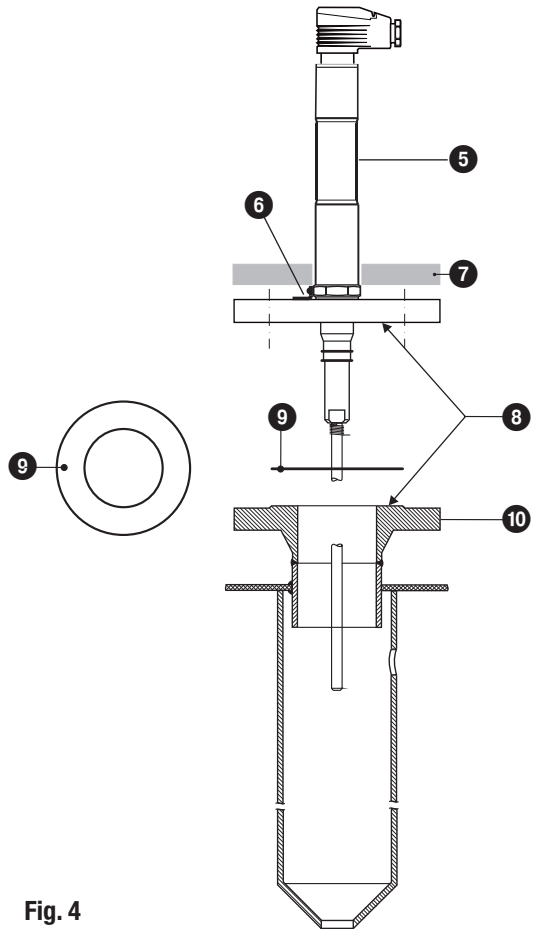


Fig. 4

Key

- | | |
|--|---|
| 1 Measuring electrode | 6 Anti-rotation element |
| 2 Bore | 7 Thermal insulation (provided on site) d=20 mm (outside of thermal insulation of steam boiler) |
| 3 Spring | 8 Sealing surface |
| 4 Electrode tip | 9 Flange joint (provided on site) |
| 5 NRG 16-50 S with four-pole connector | 10 Connecting pipe socket (provided on site) |

Installation

NRG 16-50 S, step 1

1. Screw electrode tip ④ into measuring electrode ①. **Fig. 3**
2. Carefully determine required measuring length of electrode.
3. Mark length of electrode tip ④.
4. Unscrew electrode tip ④ from measuring electrode ① and cut tip.
5. After visual inspection screw electrode tip ④ into measuring electrode ①. Slide spring ③ along electrode tip ④ so that its end completely enters the small hole ②.

NRG 16-50 S, step 2

6. Check seating surfaces. **Fig. 4**
7. Put flange joint ⑨ onto connecting pipe socket ⑩. **Fig. 4**
8. Put level electrode onto connecting pipe socket and fix it with four bolts M 16.
9. Tighten bolts in diagonally opposite pairs. The tightening torque depends on the flange joint used.



Note

- For the approval of the boiler standpipe the relevant regulations must be considered.
- Refer to pages 10 for typical installation examples.



Attention

- Make sure that the sealing surface of the connecting pipe socket is accurately machined!
- Do not bend electrode tip when mounting.
- Do not lag electrode body above the hexagonal section.
- Observe minimum spacing of 14 mm between measuring electrode / electrode tip and protection tube / level pot! **Fig. 5, Fig. 6**
- Observe the minimum spacings when installing the electrode!

Tools

- Open-end spanner A. F. 13, DIN 3110, ISO 3318
- Scriber
- Hacksaw
- Flat file, medium cut, DIN 7261, form A

Installation

Key

- 11 For the approval of the boiler standpipe with connecting flange the relevant regulations must be considered.
- 12 Vent hole Provide vent hole as close to the boiler wall as possible!
- 13 Electrode tip \varnothing 8 mm
- 14 Protection tube \geq DN 80
- 15 Distance between electrode tip and protection tube \geq 14 mm
- 16 Reducer DIN 2616-2, K-88.9 x 3,.2 - 42.4 x 2.6 W
- 17 Low water (LW)
- 18 Level pot \geq DN 80
- 19 High water HW

Electrical Connection

NRG 16-50 S with four-pole connector

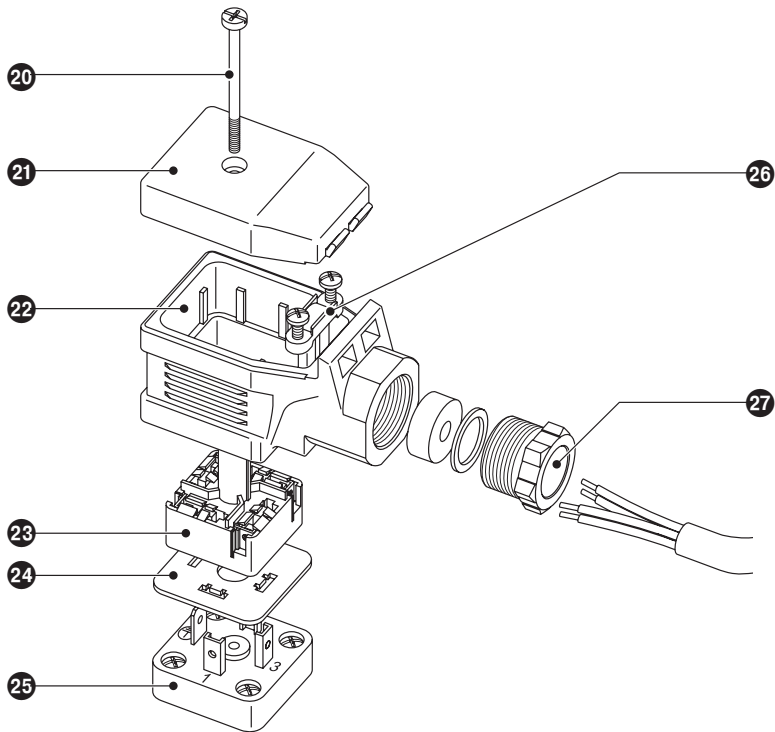


Fig. 7

Key

- 20 Screw M 4
- 21 Cover
- 22 Upper part of the terminal box
- 23 Connecting plate
- 24 Insulating plate
- 25 Contact plate of level electrode
- 26 Cable strain relief
- 27 Cable gland M 16 (PG 9)

Electrical Connection

Connection of level electrode

To connect the level electrode(s) use screened multi-core control cable with a min. conductor size 0.5 mm², e.g. LiYCY 4 x 0.5 mm².

Max. length 100 m with an electrical conductivity of the boiler water > 10 µS/cm at 25 °C.

Wire terminal strip in accordance with the wiring diagram. **Fig. 8, 9**

Connect screens to terminals 5 and 13 and to the central earthing point (**CEP**) in the control cabinet.

NRG 16-50 S with four-pole connector

1. Undo screw 20. **Fig. 7**
2. Remove upper part 22 of the terminal box from the level electrode but leave insulating plate 24 on contact plate 25.
3. Remove cover 21.
4. Press connecting plate 23 out of upper part of the terminal box 22.
The upper part of the terminal box can be turned in steps of 90°.
5. Detach cable gland 27 and cable clamp 26 from upper part of the terminal box 22.
6. Run cable through cable gland 27 and upper part of the terminal box 22 and wire terminals of the connecting plate 23 in accordance with wiring diagram. **Fig. 8**
7. Press connecting plate 23 into the upper part of the terminal box and align cable.
8. Fix cable with cable clamp 26 and cable gland 27.
9. Put cover 21 in place and insert screw 20.
10. Put upper part of the terminal box onto the level electrode and fix it with screw 20.

Tools

- Screwdriver size 1
- Screwdriver size 2.5, completely insulated according to EN IEC 60900
- Open-end spanner A.F. 18 (19) mm

Electrical Connection

Wiring diagram

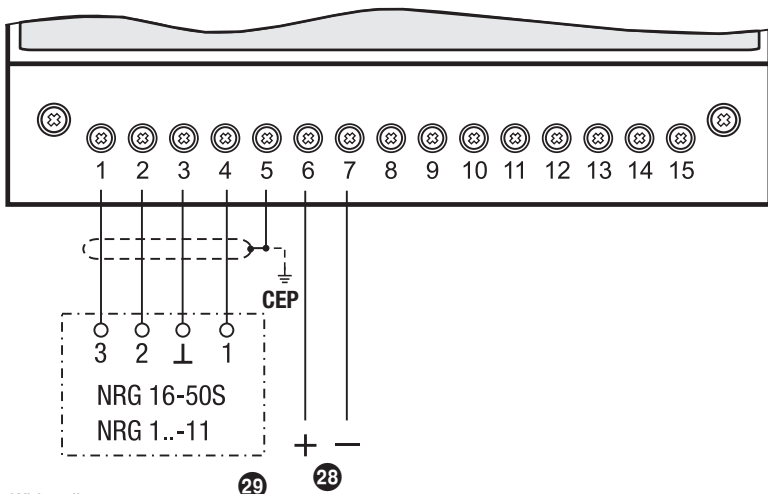


Fig. 8 Wiring diagram for equipment with ONE electrode

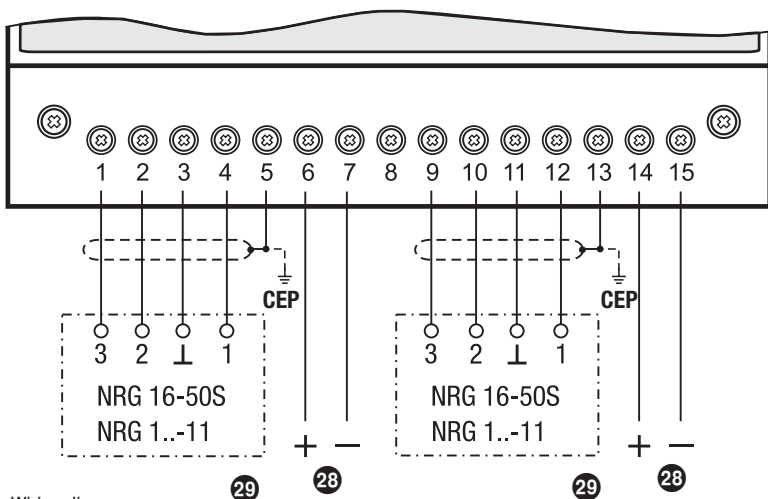


Fig. 9 Wiring diagram for equipment with TWO electrodes

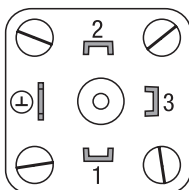


Fig. 10 Electrical connection of level electrode with four-pole connector

Electrical Connection

Key

- ⑳ Stand-by input 1 / 2, 24 V DC, for connecting the logic unit SRL
- ㉑ Level electrode NRG 1...-50S
- CEP Central earthing point in control cabinet

Commissioning, fault indication and remedy

For additional information on commissioning procedures and troubleshooting refer to the installation manual of the level switch NRS 1-50.

Removing and disposing of electrode



Danger

When loosening the level electrode steam or hot water might escape! This presents the risk of severe scalding all over the body! It is therefore essential not to dismantle the level electrode unless the boiler pressure is verified to be 0 bar.

The level electrode becomes hot during operation.

Risk of severe burns to hands and arms.

Before carrying out installation and maintenance work make sure that the equipment is cold.

Removing and disposing of electrode

1. Undo screw ㉑. Fig. 7
 2. Detach upper part of the terminal box ㉒ from the level electrode. Before removing the equipment make sure that it is neither hot nor under pressure.
- For the disposal of the equipment observe the pertinent legal regulations concerning waste disposal.



Note

When ordering spare parts or replacement equipment please state the material number indicated on the name plate.

If faults occur that are not listed above or cannot be corrected, please contact our service centre or authorized agency in your country.

Declaration of Conformity; Directives and Standards

For more information on the conformity of the equipment as well as applied Directives and Standards please refer to our Declaration of Conformity and associated certificates and/or approvals.

The Declaration of Conformity can be found online at www.gestra.com and associated certificates can be requested from:

GESTRA AG

Münchener Straße 77

28215 Bremen

Germany

Telefon +49 421 3503-0

Telefax +49 421 3503-393

E-mail info@de.gestra.com

Web www.gestra.com

Note that Declarations of Conformity and associated certificates lose their validity if equipment is modified without prior consultation with us.

For your notes

For your notes



Agencies all over the world: www.gestra.com

GESTRA AG

Münchener Straße 77

28215 Bremen

Germany

Telefon +49 421 3503-0

Telefax +49 421 3503-393

E-mail info@de.gestra.com

Web www.gestra.com

UK Importer:

GESTRA UK Ltd

Unit 1 Sopwith Park, Royce Close,
West Portway Business Park, Andover,
Hampshire SP10 3TS
United Kingdom