

Temperature Transmitter **TRV 5-60**

Description

The TRV 5-60 temperature transmitter is designed for the connection of a TRG 5-6x temperature sensor (platinum resistance thermometer Pt100 to EN 60751), to enable the redundant acquisition and monitoring of its measured values. The measured temperature and any system malfunctions that occur are displayed directly on the TRV 5-60 temperature transmitter, and made available via the CAN bus as a converted data telegram.

The temperature transmitter can be used as:

A safety temperature limiter/monitor in combination with a TRG 5-6x temperature sensor and URS 60/URS 61 safety control units.

Safety temperature limiters or monitors switch off the heating when the maximum admissible temperature is reached. Method of operation TYPE 2.BKP (+JV, with external lock) to EN 60730-1.

Visualisation and operation take place via the URB 60 or SPECTORcontrol operating unit.

Combinations of these units can be used as monitors or limiters in steam boiler and hot-water plants.

In combination with the URS 60 / URS 61 safety control unit, the TRV 5-60 temperature transmitter is suitable for safety functions up to SIL 3.

It is an element of a safety circuit up to SIL 3 as per IEC 61508 in the SPECTOR*connect* system, and can transmit alarm notifications.

Function

The TRV 5-60 temperature transmitter has a dedicated TRG 5-6x temperature sensor, the readings of which are recorded and monitored redundantly.

The actual temperature is displayed on the temperature transmitter itself, as are any system malfunctions that occur.

The temperature in the transmitter terminal box is continually monitored by a temperature sensor on the PCB.

Behaviour in the event of alarms (limit values)

The alarm state is displayed on the TRV 5-60 and transferred to the URS 6x safety control unit via CAN bus. After the delay time, the safety control unit switches off the connected safety circuit. The safety control unit does not lock independently during this process.

The following error messages:

- Sensor malfunction
- Communication failure

provoke an undelayed break in the safety circuit.

Automatic self-test

An automatic self-test periodically monitors the safety and function of the temperature sensor and measured value acquisition.

The data are transferred to the URS 60/URS 61 safety control unit in the form of a black channel data telegram via the CANopen protocol using a CAN bus to ISO 11898, and saved there.

Technical data

Supply voltage

■ 24V DC ± 20%

Power consumption

■ Max. 7 W

Current input

■ Max. 0.3 A

Internal fuse

■ T2A

Safety cutout at excessive temperature

 Cutout occurs when an excessive temperature of 75°C is measured in the electrode tip

Input/output

- Interface for CAN bus to ISO 11898, CANopen, insulated
- M12 CAN bus connector, 5-pin; A-coded
- M12 CAN bus socket, 5-pin, A-coded

Measuring range and adjustable AL.Hi limit in °C (cutout temperature)

- Measuring range: 0 °C to 700 °C
- Minimum limit: 20 °C
- Maximum limit: 650 °C
- Reset hysteresis: -2 K

Indicators and controls

- 1 x 4-digit green 7-segment display for showing actual values and status information
- 1 x red LED for displaying the alarm or error state
- 1 x green LED for displaying normal operation
- 1 x rotary knob IP65 with button for menu navigation and test function

Protection class

■ III Safety Extra Low Voltage

IP rating to EN 60529

■ IP 65

Admissible ambient conditions

■ Ambient temperature: 0 °C - 70 °C

■ Storage temperature: - 40 °C - 80 °C

■ Transport temperature: - 40 °C - 80 °C

■ Air humidity: 10 % - 95 %

non-condensing **Terminal box**

- Terminal box material: Cast aluminium, powder-coated
- Housing attachment: using the supplied mounting bracket

Temperature Transmitter

TRV 5-60

Terminals and cable entries

- 1 x 3-pin spring-loaded terminal for connecting a Pt100 temperature sensor
- Cross-section: 0.2 to 1.5 mm²
- 1 x M16 cable gland with integrated strain relief for cable diameters 5 to 9 mm

Weight

■ Approx. 1.0 kg

Important notes

A shielded, multi-core, twisted-pair control cable, e.g. UNI-TRONIC® BUS CAN 2 x 2 x ...mm² or RE-2YCYV-fl 2 x 2 x ...mm² must be used as the bus line.

Pre-wired control cables (with connector and coupling) are available as accessories in various lengths.

The baud rate (transfer rate) is determined by the cable length between the bus terminal devices, and the wire cross-section is determined by the overall power input of the measuring sensors.

0.2~A at 24~V is required per sensor. With five sensors, there is therefore a voltage drop of approx. 8 V per 100~m when using cables of $0.5~mm^2.$ In this case, the system is operating at its limits.

With five or more sensors and a cable length of $\geq 100~m,$ the wire cross-section needs to be doubled to 1.0 mm².

At larger distances of > 100 m, the 24 V DC supply can also be connected on site.

Directives and standards

You can find details on the conformity of the equipment and the applicable standards and directives in our Declaration of Conformity and the relevant certificates or approvals.

Please note our general terms of business.

How to order and specify:

Temperature transmitter

Type: Stock code: ■ TRV 5-60 2696040


Additional modules:

- Temperature sensor Pt100 to EN60751:
 - TRG 5-63 26711.. xx - TRG 5-64 26714.. xx - TRG 5-65 26716.. xx - TRG 5-66 26717.. xx - TRG 5-67 26718.. xx - TRG 5-68 26719.. xx

The last digits xx stand for the length on delivery, and must be stated at the time of ordering from Gestra.

- Safety control unit URS 60
- Safety control unit URS 61
- Visual display and operating unit URB 60 or SPECTOR*control*

Dimensions

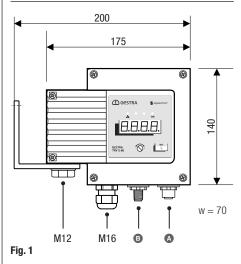

Electrical connection


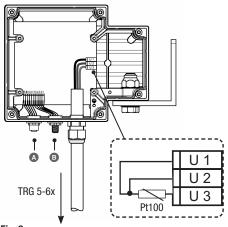


Fig. 2

- A M12 CAN bus socket, 5-pin, A-coded
- B M12 CAN bus connector, 5-pin, A-coded

Wiring diagram of CAN bus system

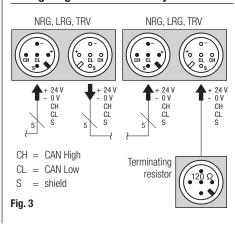

GESTRA AG

Münchener Straße 77, 28215 Bremen, Germany Tel. +49 421 3503-0, Fax +49 421 3503-393 e-mail info@de.gestra.com, website www.gestra.com

